

DVD WRITER COMPATIBLE LIST

Certain DVR models allow users to install a DVD writer by themselves.

The supported DVD writer models are as follows. Please use only the suggested DVD writer models to ensure the compatibility.

Type	Brand	Model
SATA	Liteon	iHAS120
		iHAS124-40
		iHAS124-17
		DH-24AYS
		DH-24ABS
		DH-24ACSH
	SONY	AD-7240S

Note: Before installing the DVD writer, make sure your DVR is powered off and your DVR supports this feature.

Step1: Remove the DVR cover, and find the DVD writer bracket to remove it.

Step2: Put the DVD writer in the bracket, and fix it to the bracket with two screws (optional) on each side.

Step3: Find the sata and power cables on the DVR main board.

- Power cable: Use only the cable plugged into the **black** jack as shown below.



- Sata cable:

For 16CH, use only the cable plugged into the jack of **SATA5** on the main board.

For 8CH, use only the cable plugged into the jack of **CON9** on the main board.

Note: For 8CH models, only one hard disk is allowed when a DVD writer is installed.

Step4: Connect the sata and power cables to your DVD writer.



Step5: Replace the bracket to the DVR base and fix it.